



installation distance left 10 cm

installation distance right 10 cm

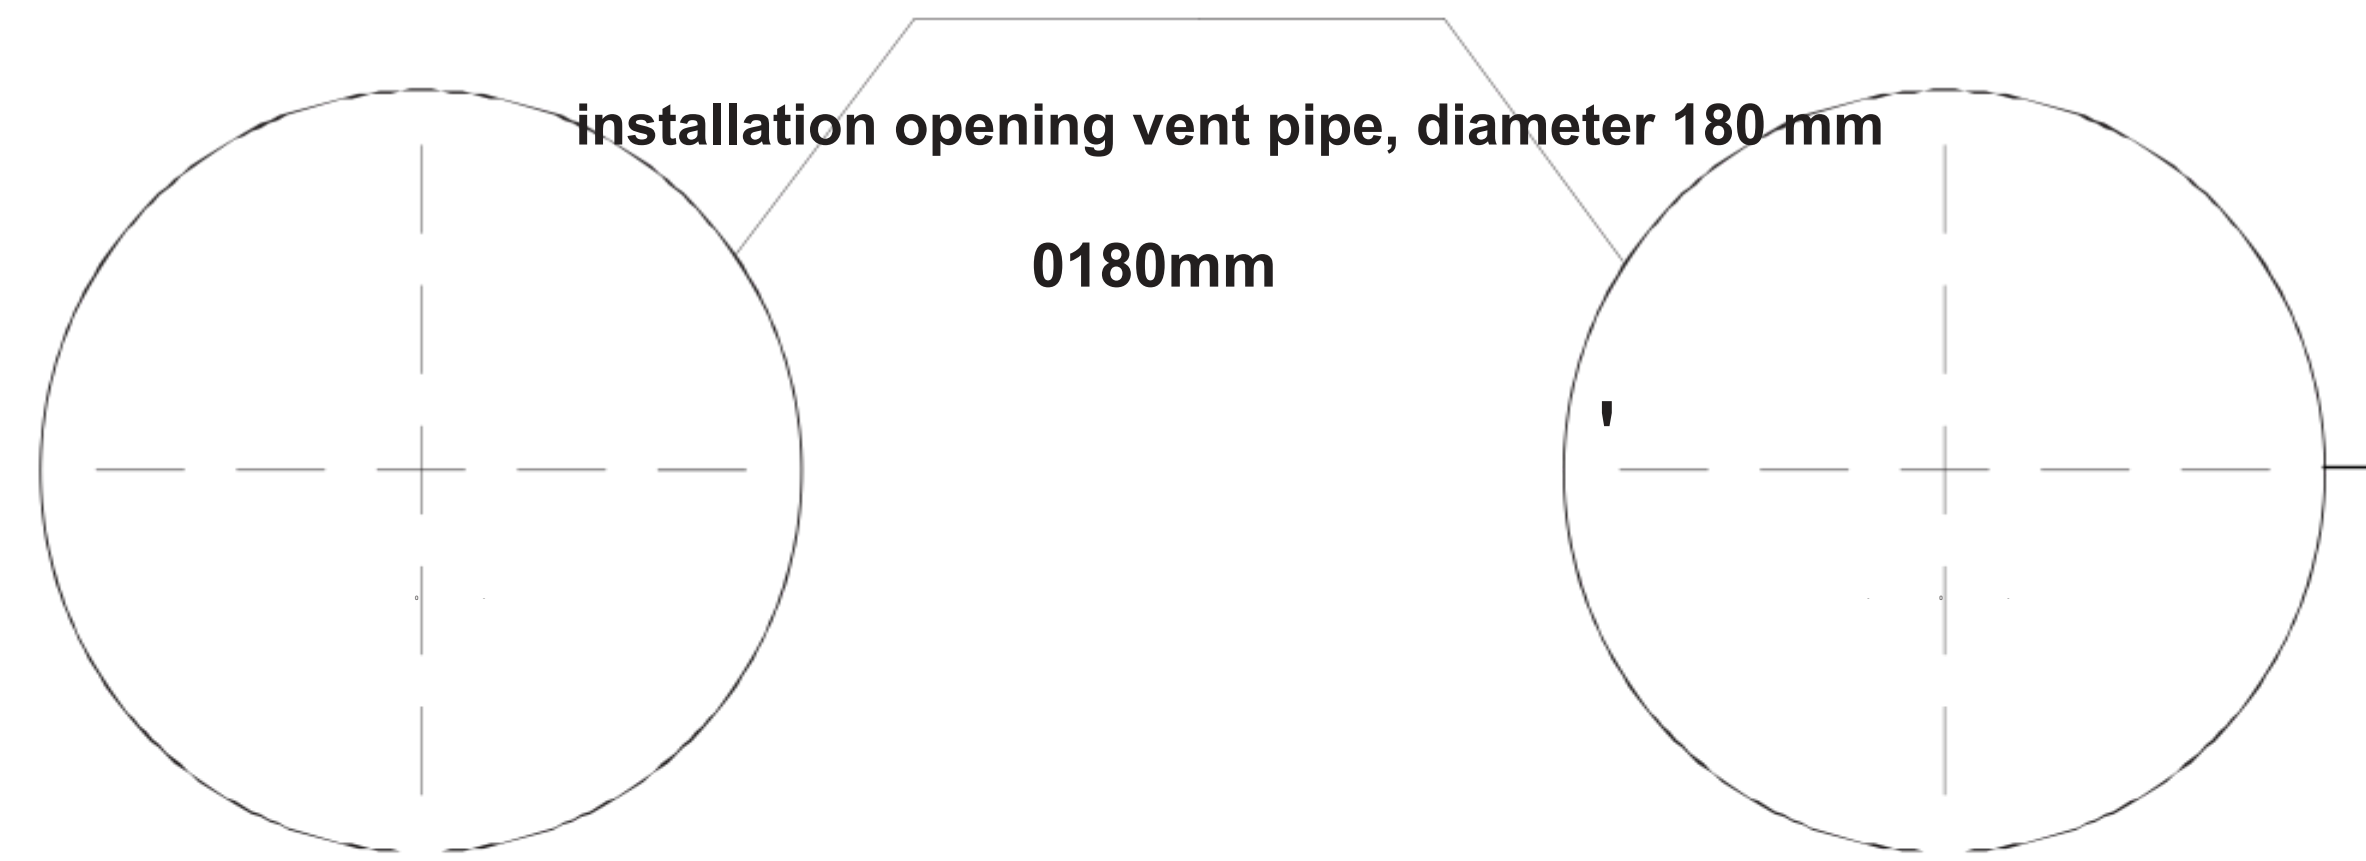

Installation opening for condensation drain, diameter 8 mm

Drain pipe opening, diameter 25 mm

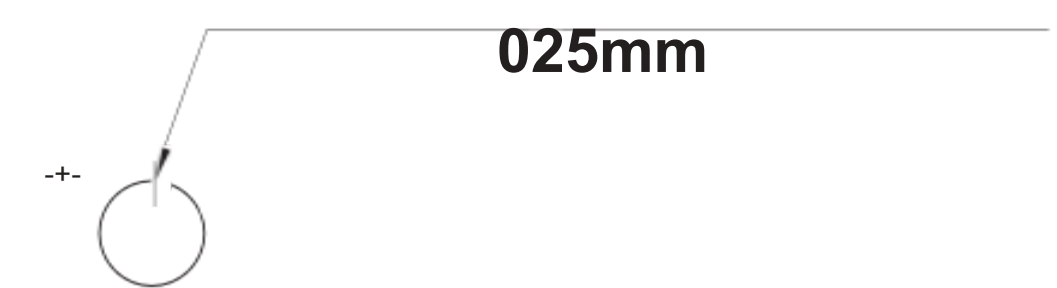

Read this before use

Smooth out the installation template and apply it to the correct position on the wall at a ratio of 1:1.

Based on the drawing, make two through-holes with a diameter of 180 mm in the correct positions in the wall for installing the vent pipes.

Based on the drawing, make six blind holes with a diameter of 8 mm and a depth of 65 mm at the correct positions in the wall for installing the expansion pipe.

Based on the drawing, make an opening with a diameter of 25 mm in the correct position in the wall the placement of the drainage pipe.

Recommended distance: left and right > 10 cm.

NB:

Hold the drawing firmly in position and make sure the positions of the holes are correct in relation to each other before drilling!